


Model 380580

Battery Powered Milliohm Meter

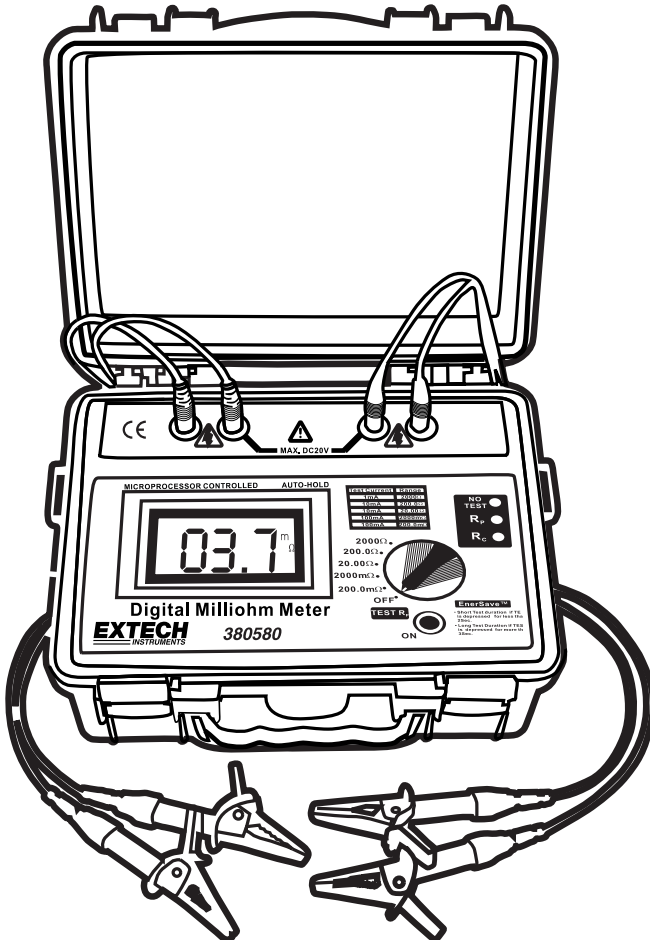


Introduction

Congratulations on your purchase of Extech's Model 380580 Battery Powered Milliohm Meter. This device offers five resistance ranges with resolution as low as 0.1mΩ. The 4-wire Kelvin clip connection ensures optimum accuracy. Typical applications include transformer, motor coil, and PC Board resistance measurements. This professional meter, with proper care, will provide years of safe reliable service.

Meter Description

1. Current Terminals
2. Potential Measurement Terminals
3. LCD Display
4. Start/Stop Test Button
5. Range Select/Power Switch
6. LED Error Lights
 - No Test/Over Temperature
 - R_P Voltage Regulation
 - R_C Current Regulation
7. Current/Range Table

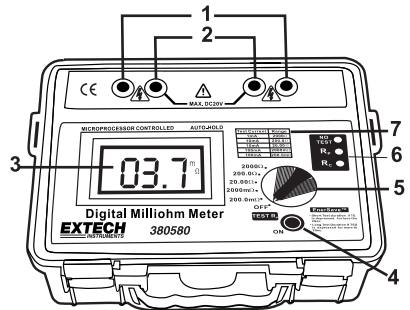

Leads

Current Leads- Banana plug to alligator clip

- C1- Green
- C2- Blue

Voltage Potential Leads- Banana plug to alligator clip

- P1- Red
- P2- Black

Kelvin Clips- Banana Plugs (2) to Kelvin Clip

- Red (P1) Green (C1)
- Black (P2) and Blue (C2)


Measurement Considerations

1. Do not apply voltage to the meter input terminals. Meter damage may result.
2. Always insure that the circuit to be measured is switched OFF, isolated and completely de-energized before connecting the test leads.
3. If the Over Temperature LED (NO TEST) indicator is lit, allow the instrument to cool down before proceeding further.
4. The R_C led indicates when the test current falls out of regulation. Selecting a higher range may eliminate the condition.
5. The R_P led indicates when the voltage on the device under test is too high. Selecting a lower range may eliminate the condition.
6. If either the R_C or R_P led is on, the measurement may be in error.
7. The current terminals are fuse protected.
8. Keep the potential test leads as short as possible. Long leads may introduce noise.
9. When using the four separate alligator clip leads always place the current leads outside the potential leads.

Preliminary Checks


Current Regulation Check

1. Connect the current leads C_1 and C_2 to the meter.
2. Set the function switch to the 200.0m Ω range.
3. Momentarily press the **TEST R_P** button. The meter will intermittently beep and R_C will light
4. Short the current leads C_1 to C_2 .
5. The R_C LED should go off, indicating that the meter is operating correctly.
6. Momentarily press the **TEST R_P** button to stop the test
7. The meter will return to **NO TEST** status.

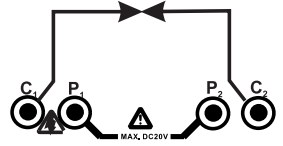


Voltage Measurement check

1. With the current test leads C_1 and C_2 shorted, connect and short the potential (voltage) leads P_1 and P_2 .
2. Set the Function switch to the 200.0m Ω position. The **NO TEST** status LED will light.
3. Momentarily press the **TEST R_P** button. (the meter will intermittently beep)
4. The display should indicate 00.0
5. Momentarily press the **TEST R_P** button to stop the test. The **NO TEST** status LED will light.
6. Remove the shorts from P_1 and P_2 , and C_1 and C_2 and
7. Short the test leads P_1 to C_1 and P_2 to C_2
8. The R_P LED as well as the **NO TEST** status LED should light indicating an over-voltage or over-range
9. Turn the rotary selector switch to OFF

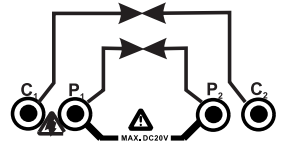

Polarity check

 
1. Short the test leads P_1 to C_2 and P_2 to C_1 together.
2. Set the Function switch to the 200.0m Ω position.
3. The “-1” negative indicator should appear in the display.



Operation check

Use the Kelvin clips for this test


1. Short the all the leads (P_1, P_2, C_2, C_1) together. **The P_1, P_2, C_2, C_1 order is important.**
2. Set the Function switch to the 200.0m Ω position. The **NO TEST** status LED will light.
3. Momentarily press the **TEST R_P** button. (the meter will intermittently beep)
4. The display should indicate near 00.0 (depending on the test clip connections) and both R_P and R_C LEDs should remain off.
5. Momentarily press the **TEST R_P** button to stop the test.

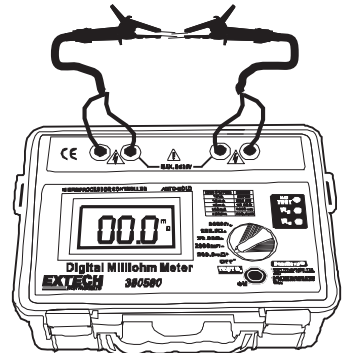

Note: These tests can be performed on any range.


Measurement Procedure

1. Select the desired measuring range on the meter. If the resistance of the device is unknown, start with the highest range and work downward.
2. Clip the test leads onto the device under test. Note: When using the 4-wire/4 alligator clip test leads, it is recommended that the current test leads be outside of the potential test leads (as shown in the diagram below).
3. For a short test duration of 10 seconds, press the TEST R_P button for less than 2 seconds. This EnerSave™ feature can be used to conserve battery power.
4. For a long test duration of 60 seconds, press the TEST R_P button for more than 3 seconds.
5. During the test, the meter will intermittently beep. At the end of the test or if the test is stopped, "HOLD" will appear and the last reading will be "frozen" on the display.

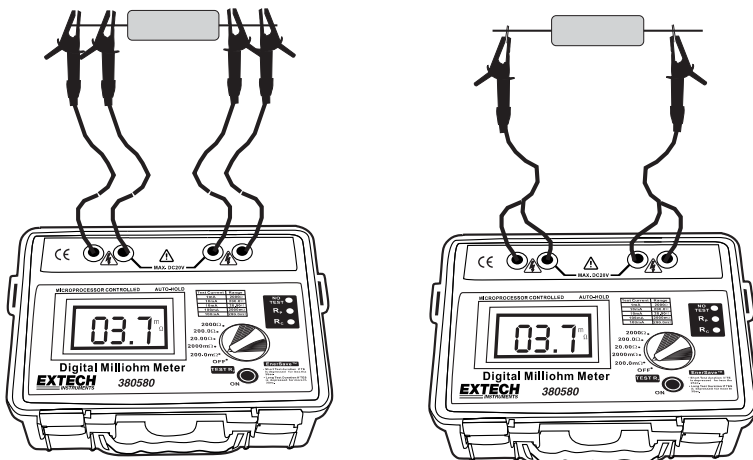

Measurement Principles

The test current flows through the resistance from the **Current+ (C+)** terminal to the **Current - (C-)** terminal. The **P+** and **P-** (**POTENTIAL**) terminals measure the voltage drop across the device under test only, thus eliminating the lead and contact resistances. The meter displays the resistance based on the test current and the measured voltage; refer to the equation below:

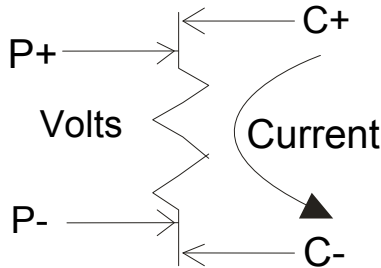

$$R_x = V_x / I_s$$

Where:

V_x is the voltage drop across the device under test;

I_s is the test current;

R_x is the resistance of the device under test.

Thermal Effects

Temperature can have a significant effect on the performance of milliohmeter due to the temperature coefficient of the resistance under test and thermal EMF's across dissimilar conductors.

Most conductors have a large temperature coefficient of resistance

For example: 0.4%/°C for copper. A copper conductor that has a resistance of 10.00m ohm at 20°C will increase to 10.40m ohm at 30°C. This should be taken into account..

A current going through a resistance will also elevate the temperature so duration of the test can also change the resistance.

BATTERY INSTALLATION

WARNING: To avoid electric shock, disconnect the test leads from any source of voltage before removing the battery cover.

1. Turn power off and disconnect the test leads from the meter.
2. Open the rear battery cover by removing two screws (B) using a slotted head screwdriver.
3. Insert the batteries into battery holder, observing the correct polarity.
4. Put the battery cover back in place. Secure with the screws.

You, as the end user, are legally bound (**Battery ordinance**) to return all used batteries and accumulators; **disposal in the household garbage is prohibited!**



You can hand over your used batteries / accumulators at collection points in your community or wherever batteries / accumulators are sold!

Disposal: Follow the valid legal stipulations in respect of the disposal of the device at the end of its lifecycle.

REPLACING THE FUSES

There are three fuses:

Power Supply Fuse

1. The power supply fuse is located in the battery compartment.
2. Remove the two screws to open the battery compartment.
3. Always use a fuse of the proper size and value.

Current Circuit Fuse

1. Fuse protection for the current terminals.
2. If the fuse is blown, the R_C LED will stay on.
3. The fuse is located under the printed circuit board.
4. There are 4 mounting screws that have to be removed.
5. Two screws are located under the black feet on the bottom of the unit.
6. The other two screws are located in the battery compartment.
7. Remove the battery compartment door and the batteries to access these screws.
8. Always use a fuse of the proper size and value.

Potential Circuit Fuse

1. Fuse protection for the potential terminals.
2. If the fuse is blown, the R_P LED will stay on.
3. The fuse is located under the printed circuit board.
4. There are 4 mounting screws that have to be removed.
5. Two screws are located under the black feet on the bottom of the unit.
6. The other two screws are located in the battery compartment.
7. Remove the battery compartment door and the batteries to access these screws.
8. Always use a fuse of the proper size and value.

Specifications

General Specifications

| | |
|-----------------------|--|
| Display | 1.0" (25 mm) LCD (1999 counts) |
| Measurement terminals | 4-Terminal Kelvin type |
| Measurement Range | Five ranges (see listing below) |
| Sampling Time | Approximately 3 times per second |
| Over input indication | Indication of "1 - - -" |
| Operating Temperature | 5°F to 131°F (-15°C to 55°C) |
| Operating Humidity | <80% RH |
| Power Supply | 8 x 1.5V AA Batteries (Approx. 10hrs continuous use) |
| Weight | 3.3 lbs (1.5kg) |
| Dimensions | 9.8x7.5x4.3" (250x190x110 mm) with cover |

Range Specifications

| Range | Resolution | Test Current | Accuracy (%reading) | Open Circuit Voltage |
|-----------------|---------------|--------------|------------------------|----------------------|
| 200.0m Ω | 0.1m Ω | 100mA | $\pm 0.5\% + 2$ digits | 4.2V |
| 2000m Ω | 1m Ω | 100mA | $\pm 0.5\% + 2$ digits | 4.2V |
| 20.00 Ω | 0.01 Ω | 10mA | $\pm 0.5\% + 2$ digits | 4.2V |
| 200.0 Ω | 0.1 Ω | 10mA | $\pm 0.5\% + 2$ digits | 4.3V |
| 2000 Ω | 1 Ω | 1mA | $\pm 0.5\% + 2$ digits | 4.4V |

International Symbols



This symbol, adjacent to another symbol or terminal, indicates the user must refer to the manual for further information.



This symbol, adjacent to a terminal, indicates that, under normal use, hazardous voltages may be present



Double insulation

Warranty

FLIR Systems, Inc. warrants this Extech Instruments brand device to be free of defects in parts and workmanship for one year from date of shipment (a six month limited warranty applies to sensors and cables). If it should become necessary to return the instrument for service during or beyond the warranty period, contact the Customer Service Department for authorization. Visit the website www.extech.com for contact information. A Return Authorization (RA) number must be issued before any product is returned. The sender is responsible for shipping charges, freight, insurance and proper packaging to prevent damage in transit. This warranty does not apply to defects resulting from action of the user such as misuse, improper wiring, operation outside of specification, improper maintenance or repair, or unauthorized modification. FLIR Systems, Inc. specifically disclaims any implied warranties or merchantability or fitness for a specific purpose and will not be liable for any direct, indirect, incidental or consequential damages. FLIR's total liability is limited to repair or replacement of the product. The warranty set forth above is inclusive and no other warranty, whether written or oral, is expressed or implied.

Calibration, Repair, and Customer Care Services

FLIR Systems, Inc. offers repair and calibration services for the Extech Instruments products we sell. NIST certification for most products is also provided. Call the Customer Service Department for information on calibration services available for this product. Annual calibrations should be performed to verify meter performance and accuracy. Technical support and general customer service is also provided, refer to the contact information provided below.

Support Lines: U.S. (877) 439-8324; International: +1 (603) 324-7800

Technical Support: Option 3; E-mail: support@extech.com

Repair & Returns: Option 4; E-mail: repair@extech.com

Product specifications are subject to change without notice

Please visit our website for the most up-to-date information

www.extech.com

FLIR Commercial Systems, Inc., 9 Townsend West, Nashua, NH 03063 USA

ISO 9001 Certified

Copyright © 2013 FLIR Systems, Inc.

All rights reserved including the right of reproduction in whole or in part in any form

www.extech.com

Garantie

FLIR Systems, Inc. garantit que cet appareil Extech Instruments est exempt de défauts matériaux et de fabrication pendant un an à partir de la date d'envoi (une garantie limitée de six mois s'applique aux capteurs et aux câbles). Si le renvoi de l'appareil pour réparation devient nécessaire durant ou après la période de garantie, contactez le service client pour autorisation. Pour obtenir les coordonnées, visitez le site Web suivant : www.extech.com. Un numéro d'autorisation de retour (AR) doit être délivré avant tout retour de produit. L'expéditeur prend à sa charge les frais d'expédition, le fret, l'assurance et l'emballage correct de l'appareil afin de prévenir toute détérioration durant le transport. Cette garantie ne s'applique pas aux dommages imputables à l'utilisateur, tels que l'usage impropre ou abusif, un mauvais câblage, une utilisation non conforme aux spécifications, un entretien ou une réparation incorrecte, ou toute modification non autorisée. FLIR Systems, Inc. déclinera spécifiquement toute garantie ou qualité marchande ou aptitude à l'emploi prévu, et ne sera en aucun cas tenu responsable pour tout dommage consécutif, direct, indirect ou accidentel. La responsabilité totale de FLIR est limitée à la réparation ou au remplacement du produit. La garantie définie ci-dessus est inclusive et aucune autre garantie, écrite ou orale, n'est exprimée ou implicite.

Calibrage, réparation et services après-vente

FLIR Systems, Inc. offre des services de calibrage et de réparation pour les produits Extech Instruments que nous commercialisons. Nous fournissons également une certification NIST pour la plupart des produits. Contactez notre service client pour toute information sur les services de calibrage disponibles pour ce produit. Un calibrage doit être effectué chaque année pour vérifier les performances et la précision du mètre. Nous offrons également une assistance technique et un service à la clientèle. Veuillez vous reporter aux coordonnées fournies ci-dessous.

Lignes d'assistance: États-Unis (877) 439-8324; international: +1 (603) 324-7800

Service d'assistance technique : Option 3 ; E-mail : support@extech.com

Réparations et retours : Option 4 ; E-mail : repair@extech.com

Les spécifications produit sont sujettes à modifications sans préavis.

Pour les toutes dernières informations, veuillez visiter notre site Web.

www.extech.com

FLIR Commercial Systems, Inc., 9 Townsend West, Nashua, NH 03063 USA

Certifié ISO 9001

Copyright © 2013 FLIR Systems, Inc.

Tous droits réservés, y compris la reproduction partielle ou totale sous quelque forme que ce soit.

www.extech.com

Garantía

FLIR Systems, Inc., garantiza este dispositivo marca Extech Instruments para estar libre de defectos en partes o mano de obra durante un año a partir de la fecha de embarque (se aplica una garantía limitada de seis meses para cables y sensores). Si fuera necesario regresar el instrumento para servicio durante o después del periodo de garantía, llame al Departamento de Servicio al Cliente para obtener autorización. Visite www.extech.com para Información de contacto. Se debe expedir un número de Autorización de Devolución (AD) antes de regresar cualquier producto. El remitente es responsable de los gastos de embarque, flete, seguro y empaque apropiado para prevenir daños en tránsito. Esta garantía no se aplica a defectos resultantes de las acciones del usuario como el mal uso, alambrado equivocado, operación fuera de las especificaciones, mantenimiento o reparación inadecuada o modificación no autorizada. FLIR Systems, Inc., rechaza específicamente cualesquier garantías implícitas o factibilidad de comercialización o idoneidad para cualquier propósito determinado y no será responsable por cualesquier daños directos, indirectos, incidentales o consecuentes. La responsabilidad total de FLIR está limitada a la reparación o reemplazo del producto. La garantía precedente es inclusiva y no hay otra garantía ya sea escrita u oral, expresa o implícita.

Servicios de calibración, reparación y atención a clientes

FLIR Systems, Inc., ofrece servicios de reparación y calibración para los productos que vendemos de Extech Instruments. Además ofrecemos certificación NIST para la mayoría de los productos. Llame al Departamento de Servicio al Cliente para solicitar información de calibración para este producto. Para verificar el funcionamiento y precisión se debe realizar la calibración anual. Además se provee Soporte Técnico y servicios generales al cliente, consulte la información de contacto en seguida.

Líneas de soporte: EE.UU. (877) 439-8324; Internacional: +1 (603) 324-7800

Soporte Técnico Opción 3; correo electrónico: support@extech.com

Reparación / Devoluciones: Opción 4; correo electrónico: repair@extech.com

Las especificaciones del producto están sujetas a cambios sin aviso

Por favor visite nuestra página en Internet para la información más actualizada

www.extech.com

FLIR Commercial Systems, Inc., 9 Townsend West, Nashua, NH 03063 USA

Certificado ISO 9001

Copyright © 2013 FLIR Systems, Inc.

Reservados todos los derechos, incluyendo el derecho de reproducción total o parcial en cualquier medio

www.extech.com